



## POWER SWITCH CAP REPLACEMENT ON i400 TABLETS

Remove the battery and screws A, B, C, D.

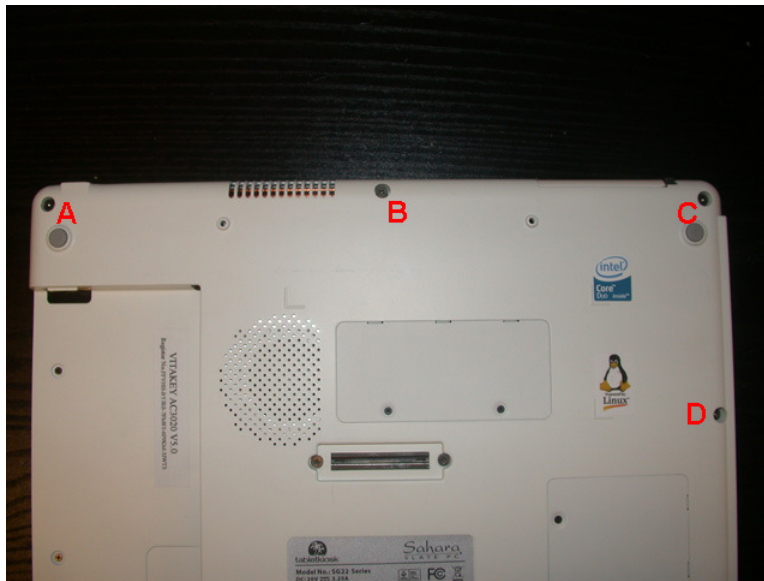

Set the tablet on its left edge and carefully pry apart the top and bottom shells, just enough to pull out the old switch cap using pliers or tweezers.  
Make sure that the other two switch caps stay in their place.

You can use the tablet while waiting for the replacement switch cap by pulling down the actuator of the switch (shown by the arrow on the picture).

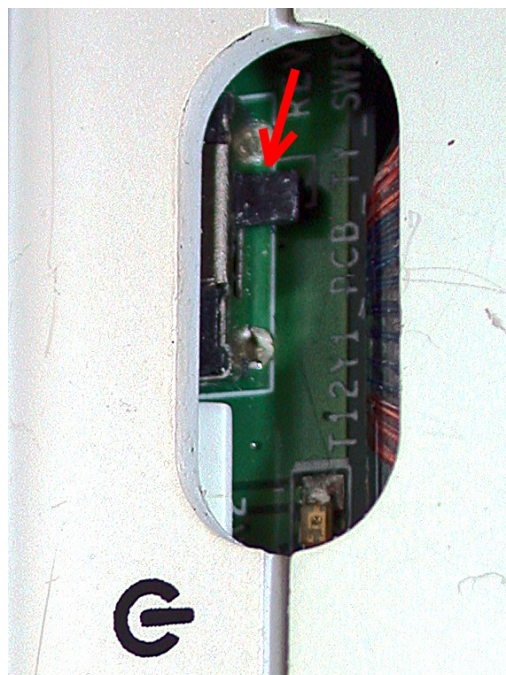

Cut the end of a Q-tip at an angle and use it to pull the actuator gently. Don't force the actuator when you don't see the blue light coming on immediately. It takes more than a second for the light to come on.



Slide in the new switch, aligned with the top position (left side on the picture), realign the other two caps to their bottom position (right on the picture), and snap together the shells.



Try the on/off switch. If the cap was not snapped in properly, it will slide without activating the switch. If this is the case, repeat the process above.

Replace the screws and the battery.